




INSTALLATION INSTRUCTIONS
2019 - up CHEVY 1500 GRILL GUARD
PART # BGGRC19LDS

1. On models with tow hooks, loosen the 18mm bumper bolt, driver side only. This bolt is in the way of the tow hook bolt.

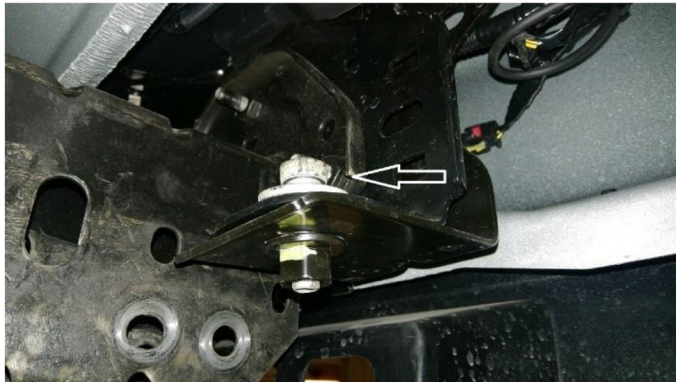

2. Remove the tow hook along with foam shield.



3. Cut a 2 ½" wide x 3" tall rectangle opening. This is for the mounting brackets.

