



16-22 TACOMA DBL CAB, V6 4WD & 2WD PRERUNNER

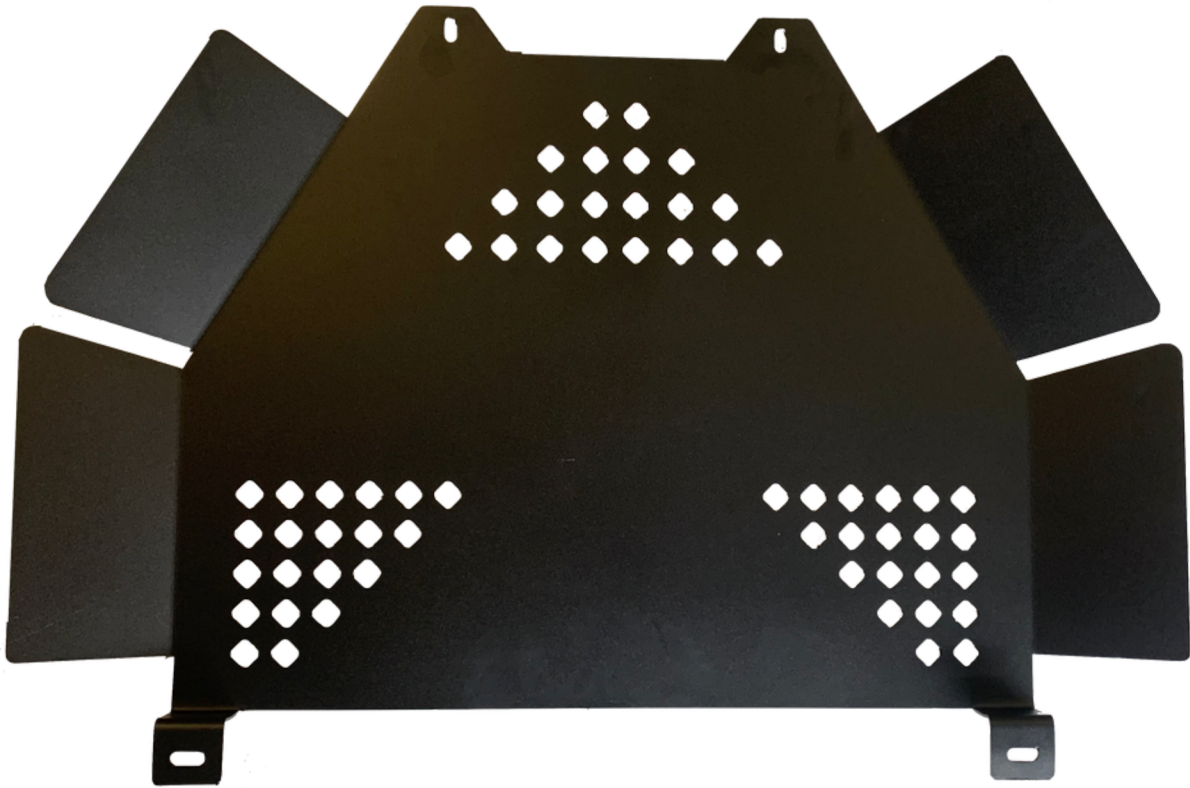

SPECIFICATIONS

- .12" STEEL
- 36" H X 24" W
- 40 LBS

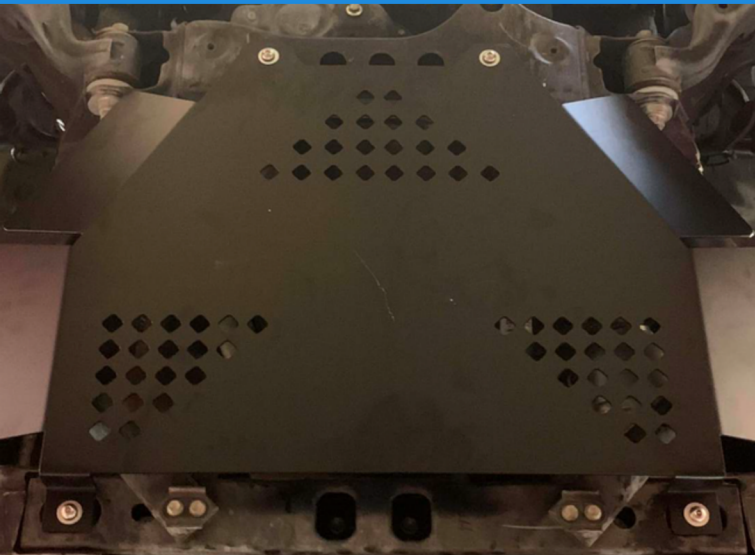


INCLUDES:



TOGGLER NUT
INSERTS



NUT TAB- X2




7/32X1 TAMPER-
RESISTANT HEX BIT



3/8"-16 TAMPER-
RESISTANT SCREW, LOCK
WASHER, FLAT WASHER
1.25"X2 & 2"X2

INSTALL

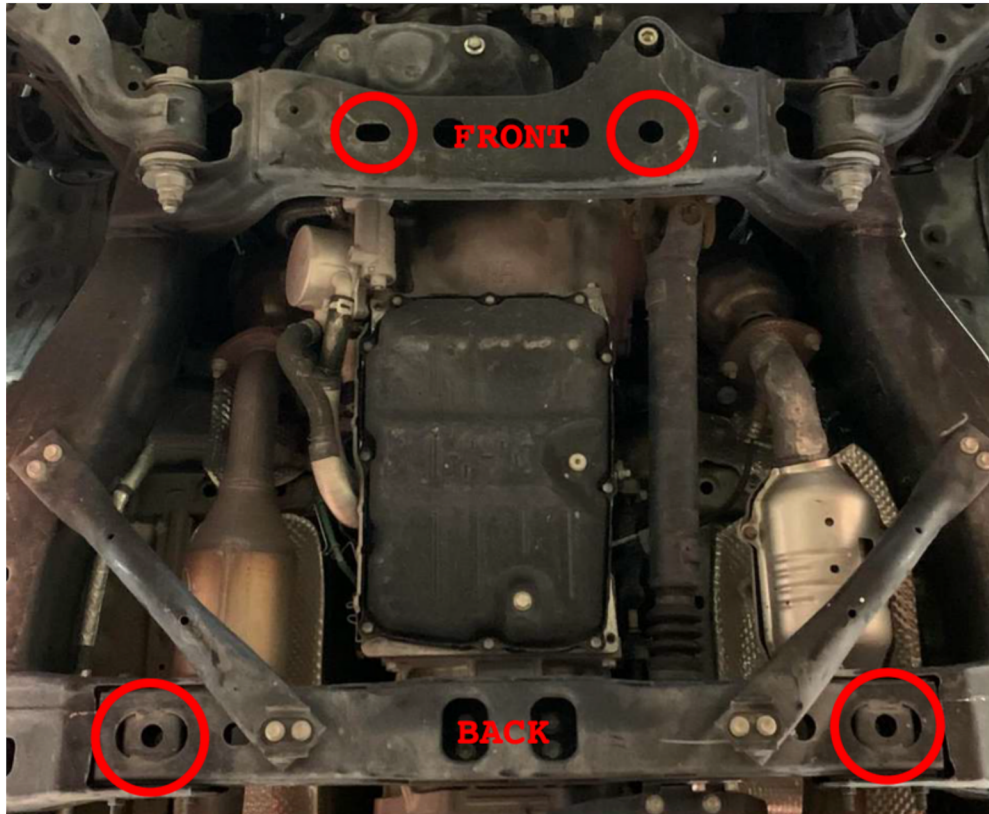


INSTRUCTIONS

1. HOLD METAL CHANNEL OF TOGGLER FLAT AGAINST PLASTIC STRAPS & SLIDE CHANNEL THROUGH HOLE.



2. HOLD ENDS OF STRAPS TOGETHER BETWEEN THUMB AND FOREFINGER AND PULL TOWARDS YOU UNTIL CHANNEL RESTS BEHIND BED CAP. WHILE HOLDING STRAPS AS SHOWN, PUSH CAP ALONG STRAPS WITH OTHER HAND UNTIL FLANGES OF CAP IS FLUSH WITH BED CAP.

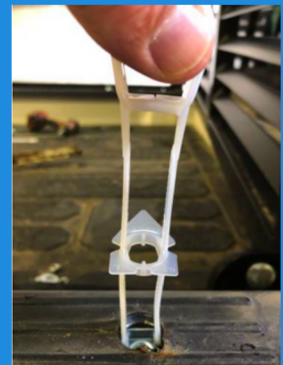

3. PLACE THUMB BETWEEN STRAPS AT WALL. PUSH THUMB SIDE TO SIDE, SNAPPING OF STRAPS LEVEL WITH FLANGE OF CAP.

